


## Installation Instructions

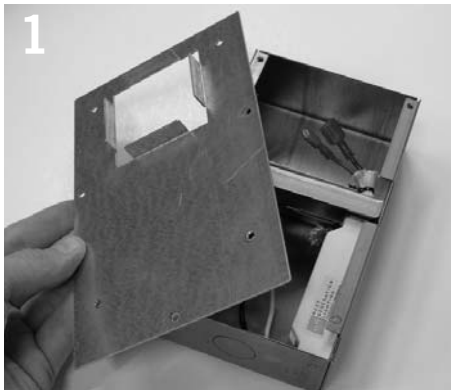

1 Remove wall box cover by removing (4) screws.




2 Connect conduit and make electrical connection to primary wires from LED driver.




3 Reattach wall box cover by replacing (4) screws and attach box to stud wall.




4 Install wall board. Cut hole in drywall around opening in Zas wall box (approx. 2.25" square).

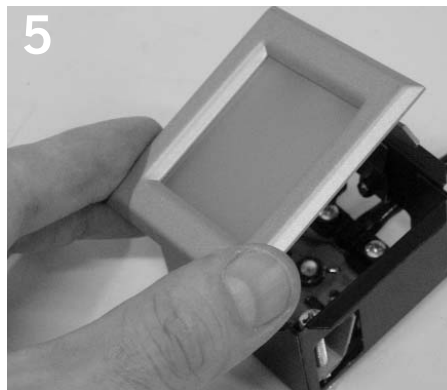


5 Unsnap and remove LED housing lens cover.

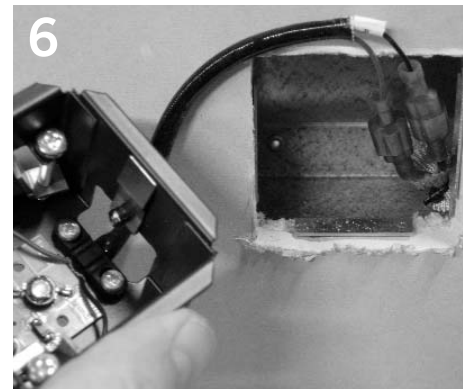

6 Connect LED housing module leads to wall box leads.  
NOTE: Connect only like colored wires.

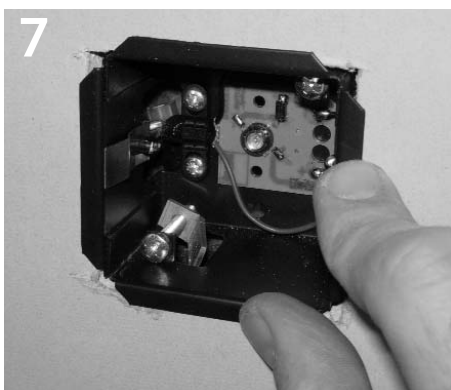

7 Snap housing into wall box.

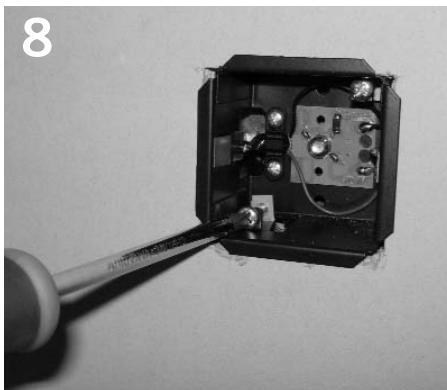

8 Anchor housing into wall box by tightening (2) screws in a clockwise direction until clamps are snug.




9 Snap LED housing lens cover into fixture housing. Fixture should be flush to wall when complete.


Product to be installed by qualified electrician only.

PART # 04040521-01 Rev. A


## Installation Instructions

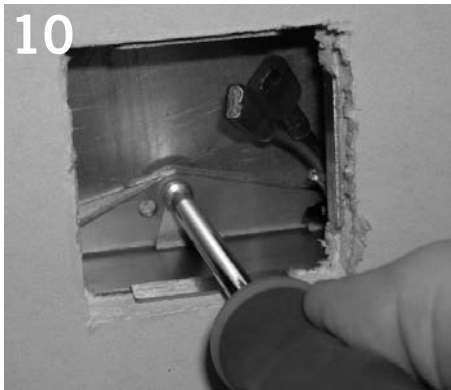

For supply conductor inspection, remove lens and housing and loosen (do not remove) screw, as shown.

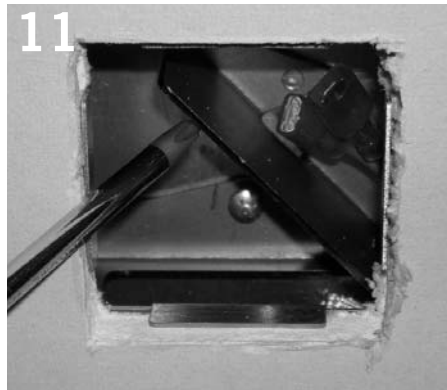

Open hinged cover to allow access to supply conductor connections.

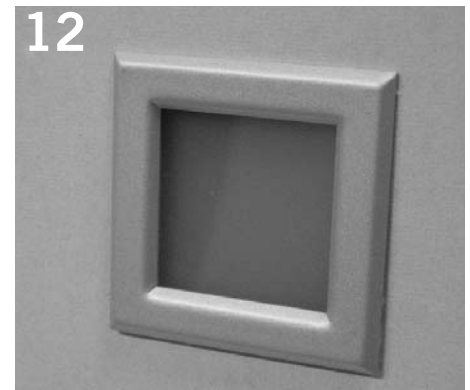

Close hinged inspection cover and secure by tightening screw. Reinstall fixture by repeating steps 6 thru 9. Fixture should be flush to wall when complete.